

# DataBand E1T1 Quickstart Guide V3.2

© 2012 Patapsco Designs Ltd



Patapsco is now a Transition Networks company.

Patapsco has recently been acquired by Communications Systems, Inc. (CSI) and is now a part of Transition Networks, Inc., a subsidiary of CSI. The high-quality, reliable Transition Networks' brand of products is now combined with the world class portfolio of telecommunications and data communications products from Patapsco Communications.

You can be assured that the same quality and support from both organizations will continue. Please contact either Transition Networks or Patapsco Communications for sales, support and product information.

**Patapsco Communications**  
The Passfield Oak, Passfield, Near Liphook,  
Hampshire  
GU30 7RL UK

**Tel: +44 (0) 1428 752900**  
**Fax: +44 (0) 1428 752901**  
**Email: [info@patapsco.co.uk](mailto:info@patapsco.co.uk)**  
**Web Site: [www.patapsco.co.uk](http://www.patapsco.co.uk)**

**Transition Networks**  
10900 Red Circle Drive  
Minnetonka  
MN 55343 USA

**Tel: 952- 941-7600 or 1-800-526-9267**  
**Fax: 952-941-2322**  
**Email: [info@transition.com](mailto:info@transition.com)**  
**Web Site: [www.transition.com](http://www.transition.com)**

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Printed: March 2012 in UK

# Table of Contents

<b>1. Introduction</b>	<b>3</b>
1.1 Transition Networks - Patapsco.....	3
1.2 Safety warnings.....	3
<b>2. Getting Started</b>	<b>3</b>
2.1 Rack Mounting Instructions.....	4
2.2 Accessories.....	4
2.3 Optional Accessories.....	4
2.4 Making Connections.....	5
2.5 Installing DbManager.....	5
<b>3. Configuring DataBand E1T1</b>	<b>5</b>
3.1 Connecting to DataBand E1T1.....	6
3.2 Notes on configuring DataBand E1T1.....	7
3.3 Identifier and Ethernet Settings.....	8
3.4 ISDN Port Configuration.....	8
3.5 Clock Sources.....	8
3.6 Finishing Configuration.....	8
3.7 More Resources.....	8

# 1. Introduction

This document is a basic guide for configuring a new Patapsco DataBand E1T1. A full User Manual for configuring all settings on the unit is supplied on the DbManager Installation Disk. Patapsco offers an optional Pre-Configuration Service and optional Telephone Support Agreements at minimal cost. Information on these options can be found in the Support document on the DbManager installation disk.

## 1.1. Transition Networks - Patapsco

Patapsco DataBand products allow cross-connectivity of E1 and T1 ports and timeslots between any source and destination connected to the unit. Conversion of E1 to T1 and vice versa is catered for, as well as conversion between A-law and  $\mu$ -law voice calls, while the DataBand E1T1 range allows simple conversion between the E1 and T1 protocols. The EV device allows conversion between V.35 and E1/T1 protocols.

## 1.2. Safety warnings



**Caution:** Danger of electric shock. The device may be connected to mains voltages. Switch to power-off state before working on the device.



**Caution:** Danger of electrostatic discharge. Electronic components are sensitive to electrostatic discharges that might damage the device. Protect the device from electrostatic discharges by wearing an electrostatic wristband.



**Caution:** Interruption of data transmission. Data transmission will be interrupted during any work on the transmission line and/or deactivation of the power supply. Make sure that any work will only be carried out on inactive lines (without data transmission) or during quiet times to reduce interference to live systems.



**Caution:** Danger of damage to devices or service interruption. Access by unauthorized third persons may cause damage to devices and/or interrupt services. Make sure that subracks are only installed in lockable locations.



**Caution:** Danger of overvoltage. During faults, dangerous unprotected voltages may be present. Ensure sufficient grounding of the housings, i.e. by connecting the grounding contact.






- Safety requirements are not fulfilled unless this equipment is connected to a wall socket outlet with a protective earth (PE) contact.
- The power cord used to connect this equipment must be HAR marked and fitted with an IEC320 connector and an ASTA approved moulded plug.
- There are no user serviceable parts in this equipment. All servicing and repair tasks must be undertaken by qualified service personnel.
- Isolation from mains power is achieved by the removal of the main power cord.

# 2. Getting Started

This section will describe how to make the physical connections between DataBand E1T1 and the other system devices, and install the Patapsco management application, DbManager.

## 2.1. Rack Mounting Instructions

The Rack Mounting Kit is comprised of the following:

Photo	Description	Quantity
	<b>L-Bracket</b>	<b>2</b>
	<b>Long Patapsco case screw</b>	<b>4</b>
	<b>Cage Nut</b>	<b>4</b>
	<b>washer</b>	<b>4</b>
	<b>Rack Mount Screw</b>	<b>4</b>

All Patapsco units can be mounted in a standard 19" rack housing. To allow units to fit into a 19" rack, a Rack Mounting Kit must be purchased for the unit (s). There are various rack mounting options depending on the size of the unit ordered. The following guide will explain how to use the Rack Mounting Kit with Patapsco units.

1. Remove the four short screws near the front or rear panel on the left and right hand sides of the Patapsco unit. The unit can be mounted with the front panel facing forward or with the ports facing forward as required.
2. Fit one of the **L-Brackets** to the side of the unit. The four small fixing holes allow the unit to protrude forward or sit further back depending on the desired position of the unit. The bracket may also face forwards or backwards depending on the desired position of the unit.
3. Fix the **L-Bracket** in place using the **Long Patapsco case screws**.
4. Fix the second **L-Bracket** to the other side of the case in the same way.
5. Put the **Rack Mount screws** through the **Rack Mount washers**.
6. Offer the unit up to the rack and fix it in place using the **Rack Mount Screws** and **Rack Mount cage nuts**.

## 2.2. Accessories

The following accessories are supplied with all Patapsco units:

Item	Description			
DbManager CD	Installable DbManager application, technical documents and manuals			
Controller Cable	Management cable. Connects to DataBand E1T1's Terminal port	Cable Spec		
		RJ12		DB9S
		<b>Pin</b>	<b>Function</b>	<b>Pin</b>
		1	Rx	3
		2	Tx	2
		3	Gnd	5
IEC Mains Cable	Connects DataBand E1T1 to the mains supply			

## 2.3. Optional Accessories

The following items can be ordered from Patapsco, or will be supplied with some units depending on the nature of the device.

- ISDN Cables -** Cables to connect the Patapsco device to a CPE or network. Please see the full manual for cable specs on all Patapsco cables
- Rack Mounting Kit -** All Patapsco units can be mounted in a 19" rack using this kit

## 2.4. Making Connections

First, connect the ISDN cables to DataBand E1T1 followed by the Terminal Port management cable (if required), LAN Port cable and lastly the Mains cable. If the unit has a DC power supply connection, use the screw terminals to connect the DC power source.



**Warning:** The -48VDC power terminals are marked **0V**, **-48V**, and **GND**. Patapsco -48VDC products are designed for use with negative voltage DC supplies, and therefore expect the positive voltage to be connected to the **0V** terminal, and the negative connected to **-48V**. Please be sure about the polarity of this connection before connecting power to the terminals. Units which have a positive +24VDC power source will be marked **+24VDC**, **0V** and **GND** respectively. Please ensure that the positive connection is made on the **+24VDC** terminal.

## 2.5. Installing DbManager

DbManager is required in order to monitor and manage Patapsco devices. Management can be made using the Terminal (serial) port, or using TCP/IP over a LAN or WAN. DbManager is installed using the CD provided with Patapsco equipment.

1. Insert the DbManager Installation Disk into the drive of the PC which will be used for management of DataBand E1T1.
2. InstallShield Wizard will start up. Follow the steps to install DbManager.
3. Serial Number – Enter the Serial Number on the case of the DbMgr Disk.



**Info:** DbManager is supplied as a 'Lite' version by default. This allows configuration and monitoring of devices, but only allows configuration of a single device node and a single user account. To use DbManager in 'Lite' mode, do not enter a serial number during installation. Please see the full DbManager User Manual for more information on configuring and using DbManager.



**Warning:** If an older version of DbManager is already installed on the management PC, it is necessary to update to the version supplied on the new DbManager CD. This can be done by consulting the 'Upgrade' folder on the DbManager CD. The 'readme.txt' file explains how to upgrade to the new DbManager without reinstalling the program.

## 3. Configuring DataBand E1T1

Follow these steps to connect to DataBand E1T1 with DbManager and configure the unit for use.


Configuration of DataBand E1T1 is carried out by setting up DbManager to make a management connection, and then setting up the elements of DataBand E1T1 in this order:

**Identifier and Ethernet settings -**  
**ISDN Port Settings -**  
**Clock Sources -**

The IP address settings and unique Identifier of the unit  
Settings for the ISDN ports  
configure which interface DataBand E1T1 is to take synchronisation clock from

## 3.1. Connecting to DataBand E1T1

1. Start up the DbManager Application
2. Login as **Super User** (no password required)
3. Four windows will be displayed:

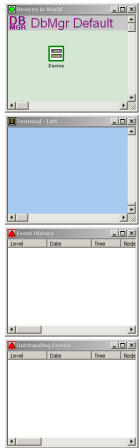

### Map

A network map showing Nodes and Links between Patapsco devices

### Terminal

A view of the communications between DbMgr and DataBand E1T1

### Event History

All events which occur while connected to DataBand E1T1

### Outstanding Events

Current events

4. Select **View → Properties → Terminal** from the DbMgr toolbar.
5. Choose the COM port which is in use. Leave the **Serial Port Rate** at the default setting of 19200bps. Click **OK**.
6. Select the **Devices in World** window and double click the **Device** node
7. The **Connected to Device** window should appear, showing the front and rear panels of DataBand E1T1. If it does not, check the COM port settings and re-try



**Warning:** If management via the Terminal port is not possible, it could be that the management PC has another application running which uses the COM ports of the PC. Even when some programs which use the COM ports are closed down, other programs cannot access the COM ports. Rebooting the PC is required in order to release the COM ports so that DbManager can use them.

If the PC and DataBand E1T1 are connected to the same LAN, management is possible using TCP/IP. All Patapsco products use the default IP settings:

<b>IP Address</b>	<b>192.168.0.1</b>
<b>Subnet Mask</b>	<b>255.255.0.0</b>
<b>Gateway</b>	<b>0.0.0.0</b>

To configure DbManager to access DataBand E1T1 using TCP/IP, please follow these steps:


1. Select **View → Properties → Terminal → Device IP Addresses** from the DbMgr toolbar
2. 192.168.0.1 should already be configured. If using another IP address, add it to the list using the **Add** button
3. Click **OK → OK**
4. Select the **Devices in World** window and double click the Device node
5. The Connected to Device window should appear, showing the front and rear panels of DataBand E1T1

The Device node can be made to connect to other IP addresses configured in the **Device IP Addresses** list by right-clicking the node, selecting **Properties** and choosing an IP address from the **IP List**.



**Info:** TCP/IP management requires TCP port 3001 (dec) to be open between the management PC and DataBand E1T1. Any switches, hubs or routers must be configured to allow communication on this port in order to manage DataBand E1T1 via TCP/IP.

A successful management connection will open up the **Connected to Device** window:

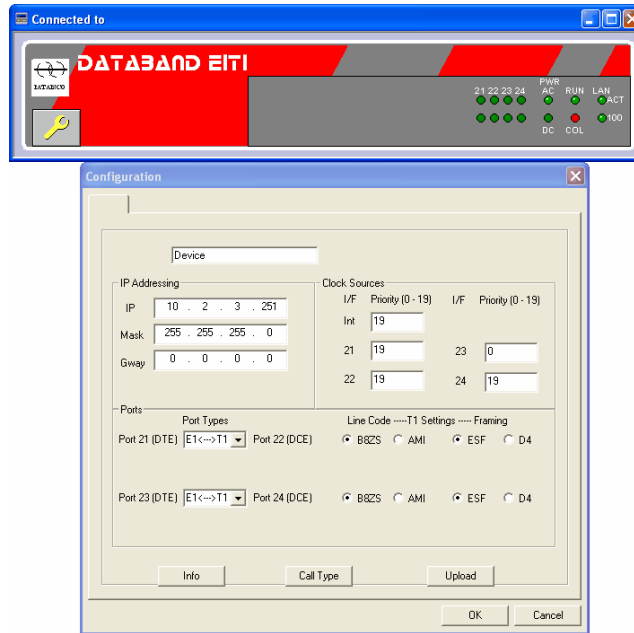

## 3.2. Notes on configuring DataBand E1T1

### Uploading

Changes to config can be made on each window and saved using the **OK** key when exiting each window. When happy with the configuration, it must be uploaded to DataBand E1T1 for the new settings to come into effect.


To upload, go to **File → Upload** or press the **Upload** button on the config window and wait until the progress bar completes.

### Saving Files

Configuration files can be saved in order to backup settings or copy settings across to another unit. Once configuration has been uploaded, go to **File → Save File** and choose a location to save the file to. The file extension of any saved config files is **.dbc**

### Loading Files

Once connected to a unit, an existing configuration file can be loaded to the device. Go to **File → Open File** and navigate to the saved file. Click **Open**. Now the file must be uploaded to DataBand E1T1. Go to **File → Upload** or press the **Upload** button on the config window and wait until the progress bar completes.

 **Warning:** When loading existing configuration files to a unit, please ensure that the correct configuration files are used for the unit type in use. DataBand E1T1 configuration files are not compatible with other Patapsco platforms.

### 3.3. Identifier and Ethernet Settings

This menu controls the **IP Address**, **Subnet Mask**, **Default Gateway** and **Identifier**. Enter a unique Identifier and IP settings for the unit. These features are all fully explained in the DataBand E1T1 User Manual on the DbManager Installation Disk.

### 3.4. ISDN Port Configuration

Set the TDM ports to E1 or T1 mode. T1 ports have options relating to the T1 Line Code and Framing type. Please consult the documentation of the connected CPE if unsure of the correct settings to use.

There are two LEDs for each TDM port, and the LED states are as follows:

Top LED on -	Layer 1 and 2 established
Bottom LED on -	Channels active on interface

### 3.5. Clock Sources

DataBand E1T1 must be configured to either receive clock from an ISDN interface, a connection to another DataBand E1T1 or generate clock internally. Different priorities can be set for each port, so if one port is unavailable, DataBand E1T1 will clock from the next available port in the Clock Source hierarchy.

Enter a digit to mark the priority of each ISDN port and the internal clock. **0** will denote the highest priority Clock Source and **19** will denote the lowest. Ports which are not to be used for clocking can have their values left at 19.



**Warning:** Clock Sources must be configured correctly to ensure error-free operation when DataBand E1T1 is connected to any other clock-locked system or network. Please consult the full DataBand E1T1 manual if unsure how to configure Clock Sources.

### 3.6. Finishing Configuration



**Note:** Please remember to **Upload** when configuration of DataBand E1T1 is complete. To upload, go to **File → Upload** or press the **Upload** button on the config window and wait until the progress bar completes.

### 3.7. More Resources

All Patapsco products and the DbManager application have their own User Manuals which can be found in the 'Documents & Manuals' folder on the DbManager installation disk. Please consult these manuals for more detailed information on any aspect of using Patapsco products. All documentation can also be obtained by registering at the Patapsco website:

[http://www.patapsco.co.uk/Top\\_Level/LogIn\\_Register.asp](http://www.patapsco.co.uk/Top_Level/LogIn_Register.asp)

For help with a specific problem, please click on the **On-Line Help** icon on the website, or email a request to [support@patapsco.co.uk](mailto:support@patapsco.co.uk)